



Asus Zenbook UX32VD Hard Drive Replacement

Instructions on replacing the hard drive within the Asus Zenbook UX32VD.

Written By: Michael Remmel



 
 
 
INTRODUCTION

Replace or upgrade your hard drive in your laptop to gain more storage space!

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Bottom Panel

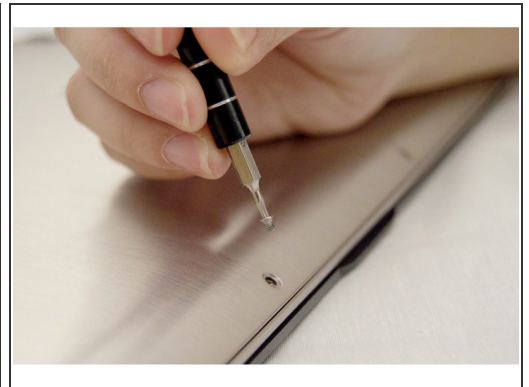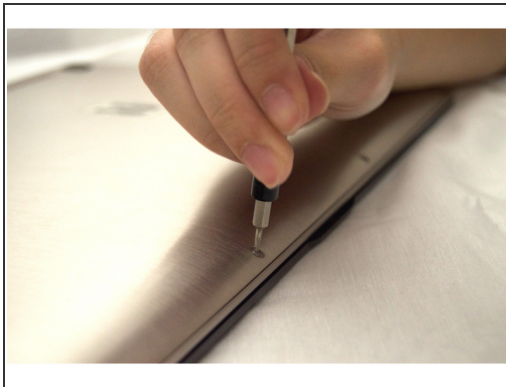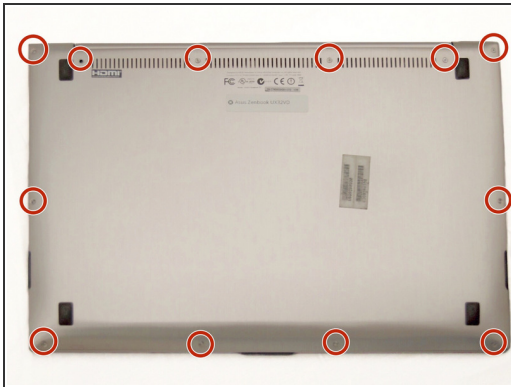



- Remove the twelve 3 mm bottom panel screws with a [T5 Torx Screwdriver](#).

 Step 2

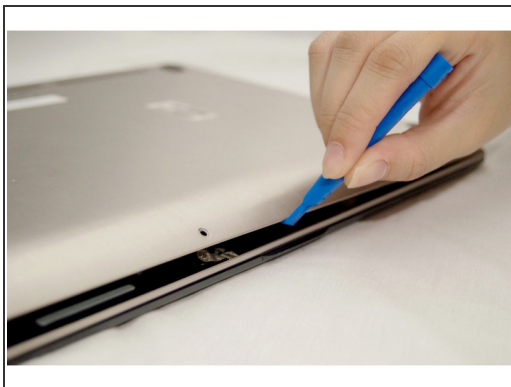



- Use a [plastic opening tool](#) to pry along the perimeter of the bottom panel until it can be easily removed.
- Remove the bottom panel from the body of the laptop.
- Set aside the bottom panel.

  Step 3 — Battery

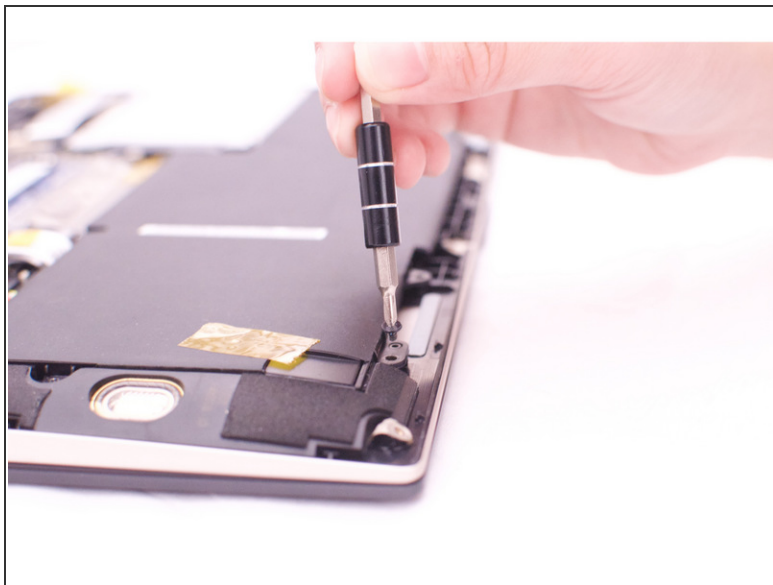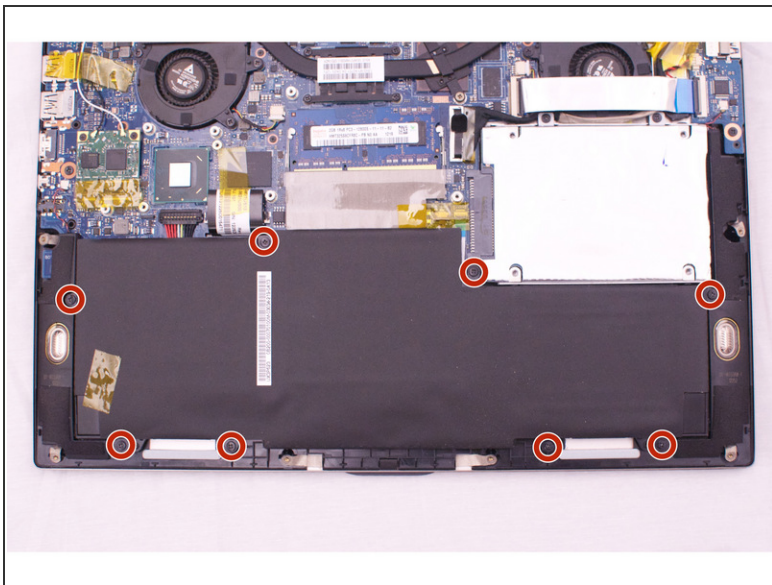




- Remove the eight 3 mm Phillips #0 screws on the bottom panel.

  Step 4

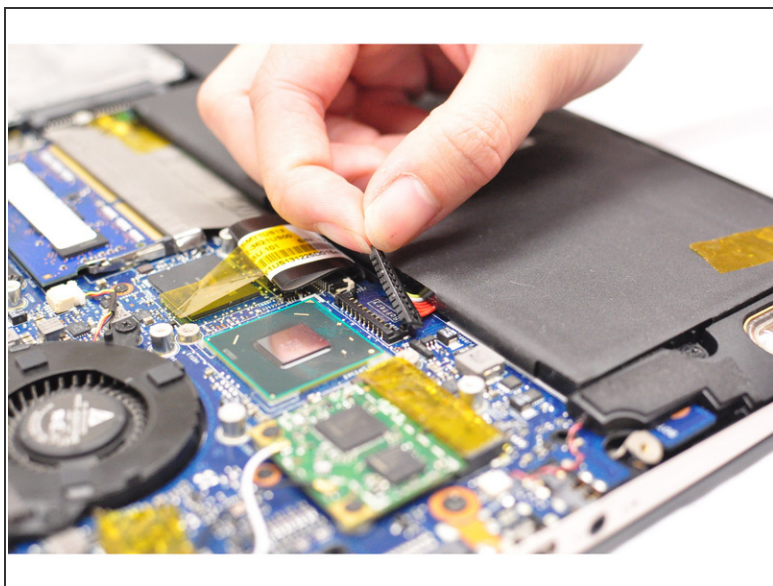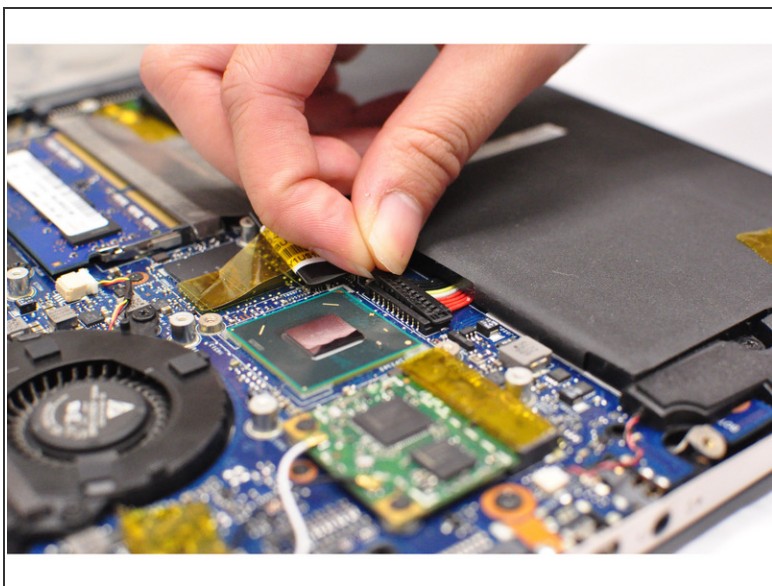

- Pry up each side of the flat connectors by hand or with a [plastic opening tool](#).
- Lift the connector straight up from its socket.

   Step 5

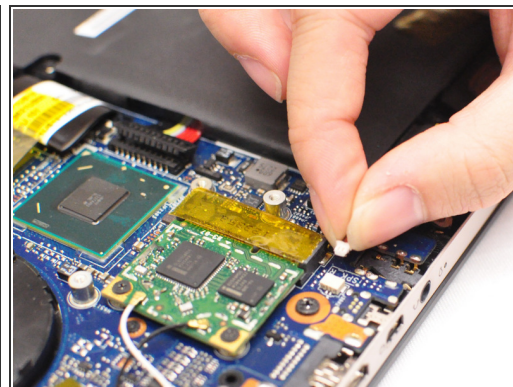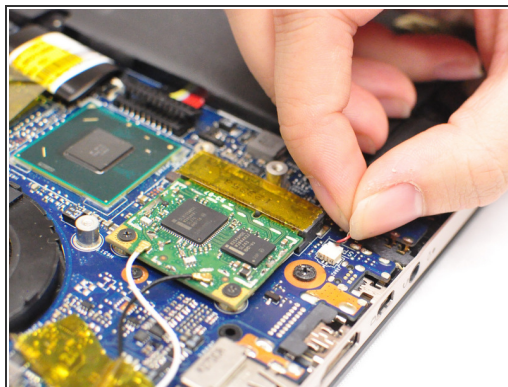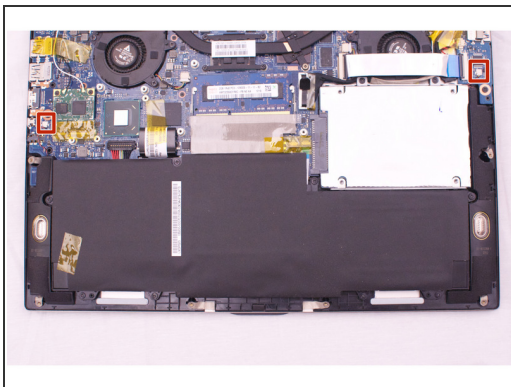



- Unplug the two bundled cable connectors on each side of the battery.
- Pull the cable away from the connector in the same direction as the individual wires are running.
 - ⚠ Pull evenly on the full width of the cable so that no individual wires are overly strained.

Step 6






- Remove the battery completely.

  Step 7 — Hard Drive

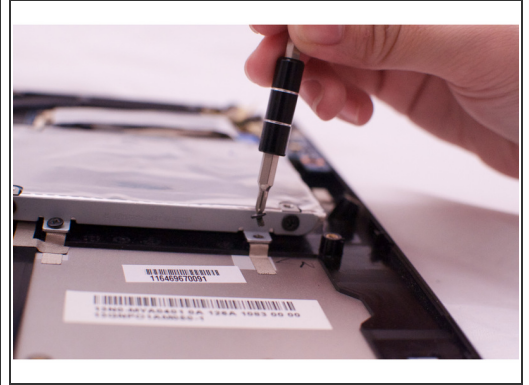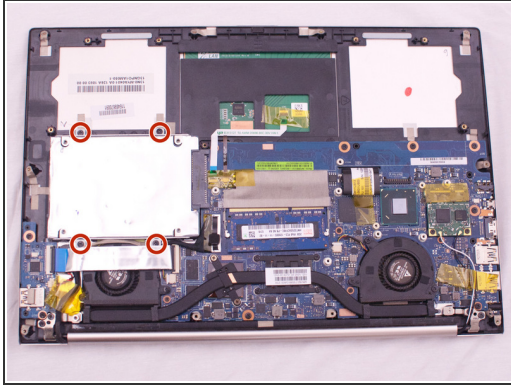

- Remove the four 3mm hard drive screws with a [Phillips #0 Screwdriver](#).

   Step 8

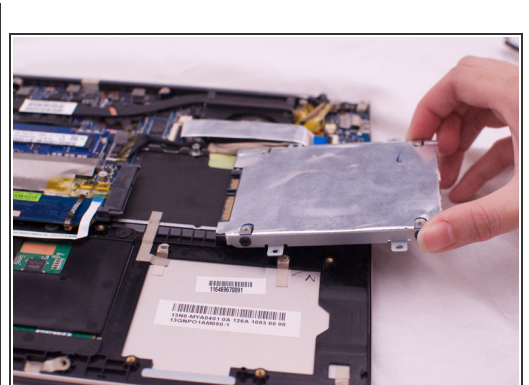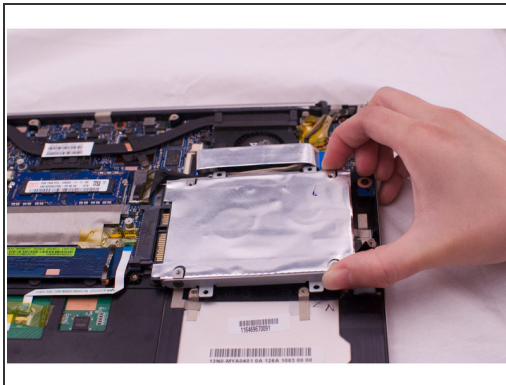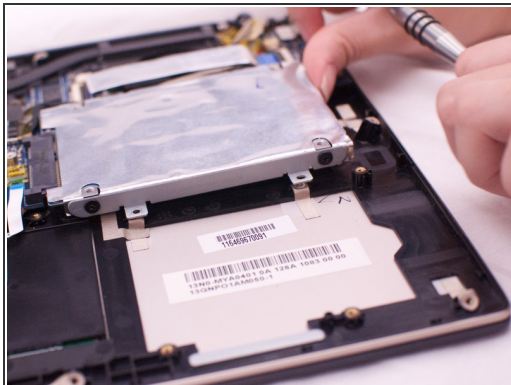

- Lift the hard drive slightly and gently pull the hard drive from the socket.
 ⚠ Do not lift the hard drive too high. Doing so could damage the hard drive or other internal components of the laptop.
- Remove the hard drive completely.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 02:22:28 PM.